








QUICK START GUIDE

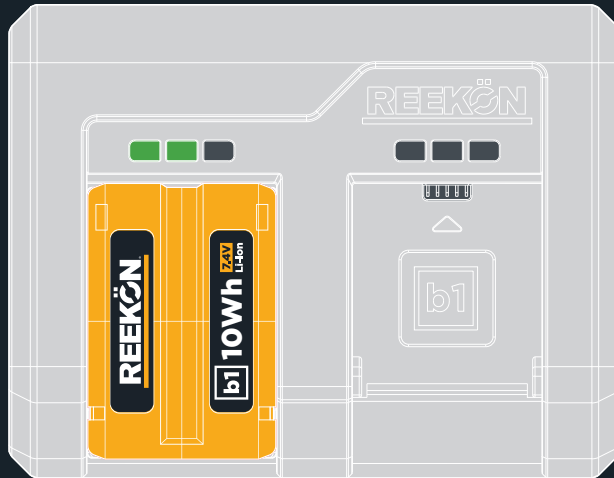


DOCK
DUAL BATTERY CHARGER

NOTE: Appearances, features, and functionality may differ from the written instructions due to updates to the device software. For the latest information and additional details, please visit our website.

LED INDICATORS

FLASHING GREEN FIRST BAR - 1-33%	CONTINUOUS GREEN - 100%
	
FLASHING GREEN SECOND BAR - 34-66%	FLASHING - FAULTY BATT.
	
FLASHING GREEN THIRD BAR - 67-99%	FLASHING - HOT/COLD DELAY
	

PRODUCT DIAGRAM

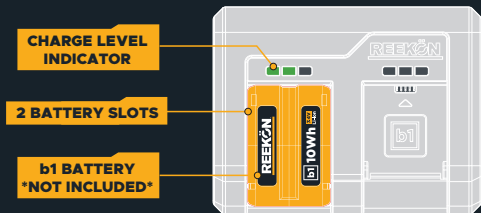

WALL MOUNTING YOUR b1 DOCK

1. Pick a clean, flat section of the wall where you want to mount your B1 Dock.
2. Using a pencil or marker, mark two drill points exactly 54mm or 2.13 inches apart (center-to-center).
3. Drill two pilot holes and insert wall anchors if mounting on drywall or masonry.
4. Insert two screws (not included) into the marked holes, leaving the heads slightly raised.
5. Align the back of the B1 Dock over the screws and slide down to lock it in place.

USER SAFETY

▲ WARNING: To reduce the risk of injury, the user must carefully read the b1 DOCK QUICK START GUIDE. The person responsible for the TIM must ensure that all users understand and comply with the instructions.

Remove the battery and unplug the charger if not used for an extended period. If the charger will not be used for a long time, disconnect it from the power source and remove the battery (if applicable). This helps prevent overheating, damage, or potential fire risk.

Do not expose the product to high temperatures for long periods. Avoid leaving the charger in hot environments such as an outdoor shed or in direct sunlight. Prolonged exposure to heat may cause the product to malfunction or become a safety hazard.

Keep dry. Do not handle the charger, wall adapter, or plugs with wet hands. Failure to observe this precaution could result in fire or electric shock.

Keep this product out of the reach of children. Failure to follow this precaution may result in injury or damage to the product.

Do not use in the presence of flammable materials. Failure to observe this could result in an explosion or fire.

During thunderstorms, avoid touching the plug or the AC adapter when charging or using this product to prevent the risk of electric shock.

TECHNICAL ASSISTANCE & REPAIR

For questions about applications, technical support, repair or more information, please see our website: <https://www.reekon.tools>



USE WITH PROVIDED WALL ADAPTER AND USB-C CABLE

COMPATIBLE WITH REEKON B1 BATTERIES ONLY

The product specifications are subject to change without notice. REEKON Tools, Inc. reserves all rights to final interpretation. All trademarks, product images, and technical specifications are the property of REEKON Tools, Inc. All rights reserved.

REEKON®

www.reekon.tools

contact@reekon.tools